

1. Condensate Drains

MODEL	MAX WORKING PRESSURE	GROSS PRICE
HV	16 bar	13,50
HER	16 bar	52,00
HS 20	20 bar	57,00
TD 16	16 bar	133,00
CDI 16	16 bar	210,00

HV - Manual condensate drain

Manual condensate drains HV are used for discharging condensate from filters and other vessels with 1/2" drain connections. In order to prevent condensate from becoming re-entrained in the airstream we recommend controlling the condensate level in filter bowl, which requires an automatic drain trap.



Technical data

- material: brass
- operating temperature range: 0-120°C (32-248°F)
- operating pressure range: 0-16 barg (0-232 psig)
- connection: R 1/2"
- oil resistant o-ring